

2 GANG Panel Remote (2.4G)

Model No.: ESR2T

 
Product Feature

- 2 Gang smart panel switch can turn on /off light
- Long press button to dim brightness of light
- Built-in human presence sensor, the indicator will light up automatically while detecting human activities
- Dim brightness of indicator
- Supports matching multiple devices and can control multiple devices simultaneously.




Product Parameter

Product Name:	2 GANG Panel Remote	IP Rate:	IP20
Model No.:	ESR2T	Working Temperature:	-10~40 C
Type	2 GANG	EMC Standards (EMC):	ETSI EN301 489-1 v 2.2.3 ETSI EN 301 489-3 v 2.3.2
Input voltage:	100V~240V~ 50/ 60Hz	Safety Standard (LVD):	EN 61347-2-11: 2001+A1: 2019 EN 61347-1: 2015+A1:2021 EN 62493: 2015+A1:2022
Standby Power:	<0.4W	Radio equipment (RED):	ETSI EN 300 400 V2.2.1
Transmitting Power:	6dBm	Certification:	CE、EMC、LVD、RED
RF:	2.4GHz		
Control Distance:	30m		

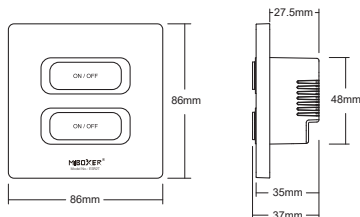

Indication

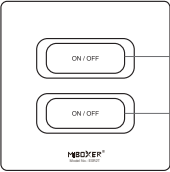 

2-GANG Switch Short press to "ON/OFF" the light,
Long press to adjust the light brightness.

 
Human Presence sensor

The indicator on the panel will light up once detecting human and it will recover previous brightness once human is out of detecting range.


- While 2 zone are in OFF status: Long press "ON/OFF" to change the brightness of bias light, releasing your finger to confirm bightness.
- Long press ON/OFF everytime to change the direction of brightness dimmable (incremental or decrease)

Link/Unlink

Link

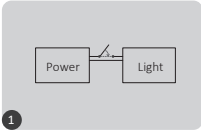

 1 Turn off light 10 seconds and turn on again

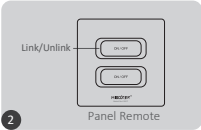

2 Short press "ON/OFF" 6 times within 3 seconds

 


3 link is done once light flashes 3 times slowly




Link is failed if light doesn't flash, please repeat above steps
(Attention: can not link again if remote already finished linking)


Unlink:

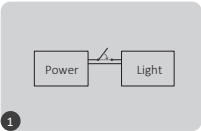

 1 Turn off light 10 seconds and turn on again

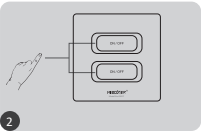

 2 Hold the "Power" button for 3 seconds to activate the clearing mode (the mode will exit automatically after 30 seconds, or it can be canceled by holding the "Power" button for 3 seconds again).

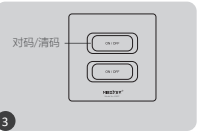

3 Within 30 seconds, press the "ON/OFF" button on the remote control 5 times.

 


4 link is done once light flashes 10 times quickly



Unlink is faild if light doesn't flash, please repeat above steps
(Attention: no need to unlink if the light never be linked)

Connection Diagram

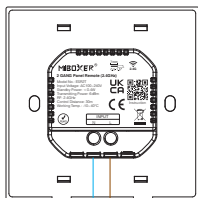


Input: AC100-240V


N

L

 Installation Diagram

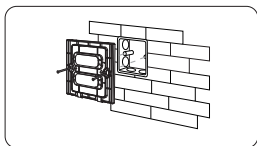

 Wiring the cable, Fix the controller base on the bottom case with screw.

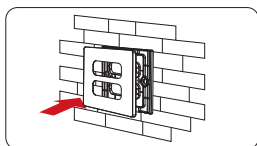

Put back the cover

Attention

1. Please ensure that voltage, N and L are correct connection, it will damage the light with wrong wiring
2. Please turn off mains before wiring cable and ensure that connection don't have any problem like short circuit
3. Don't disassemble it if you are not expert
4. Don't use it near magnetic or metal area, it will affect signal and reduce distance.



Made in China